


WorldPenScan WiFi

User Manual

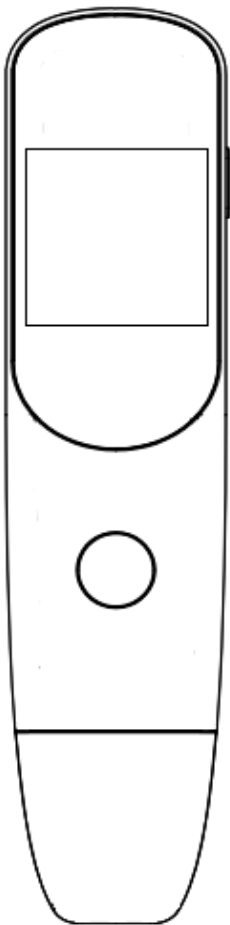

This manual contains important information, please keep it for future use.

WorldPenScan WiFi Tutorial

English

To know how to get started, please scan the QR code below, or access the URL.

Français

Pour savoir comment commencer, veuillez numériser le code QR ci-dessous ou accéder à l'URL.

Deutsch

Um zu erfahren, wie Sie loslegen können, scannen Sie bitte den unten stehenden QR-Code oder rufen Sie die URL auf.

Italiano

Per sapere come iniziare, scansiona il codice QR di seguito o accedi all'URL.

Español

Para saber cómo empezar, escanee el código QR a continuación o acceda a la URL.

<http://d.penpower.net/wpswifi>



1. Product Description

WorldPenScan WiFi is a portable scanning translation pen that is easy to carry.



By connecting the WorldPenScan WiFi translation pen and open the WorldPenScan WiFi web app, you can scan printed texts from your books, look up words, and translate sentences for language learning. It can be used across devices, such as smartphones, tablets, computers, or Chromebooks.

⦿ Package Contents

- Pen scanner x1
- Type-C USB cable x1
- Quick guide and warranty card x1

⦿ Product Specifications

- Product Name: WorldPenScan WiFi
- Screen: 1.3 inches
- Capacity: 8 GB
- Lens: 2 mega pixels
- Use environment: -5° C ~ 45° C
- Product size: 134* 31.5* 14 mm
- Charging cable: USB Type-C
- Battery: 1200 mAh rechargeable lithium polymer battery

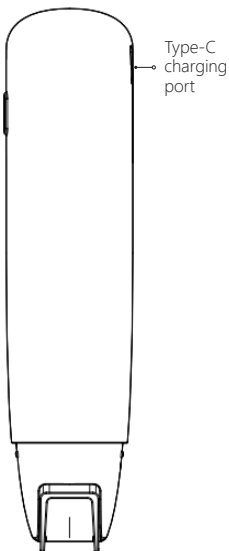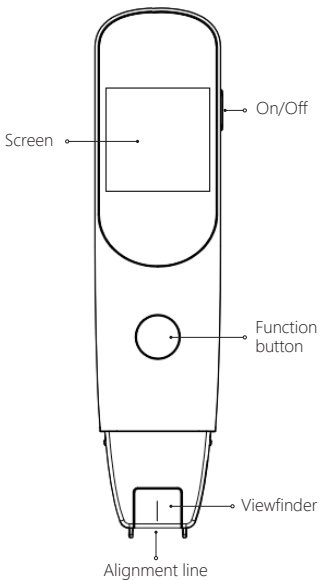

2. Function Introduction

⊙ Power On/Off

Long press the 【On/Off】 button for about 3 seconds.

⊙ Wi-Fi Connection

After turning on the WorldPenScan WiFi, follow the initialization steps to set the Wi-Fi of the device or tap the 【Settings】 icon in the menu, select the 【WiFi】 item and open it, then select the Wi-Fi you want to connect.


Note: When using this product outdoors, you can choose to use the mobile hotspot for Wi-Fi connection.

⊙ Settings

Slide from right to left on the screen of the WorldPenScan WiFi to see the 【Settings】. After tapping it, you can set the WiFi, Brightness, Language, Pen holding mode, Auto shutdown, Standby time, Reset and Upgrade.

⊙ USB Charging

When the system prompts that the battery is low, please charge it in time. It takes 2.5 hours to charge the pen.

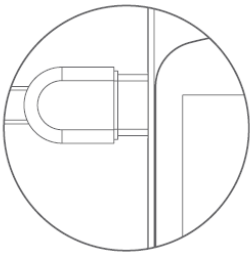

Please use the specific USB Type-C cable with a certified DC5V-1A adaptor to charge.

⦿ **Device Connection**

• **How to work with your smartphone**


Scan the QR code on the pen scanner with your smartphone's camera to open the WorldPenScan web app (ScanNote) on your smartphone. And then connect the pen scanner to a Wi-Fi connection, and you are ready to scan texts.



• **How to work with your computer**


Tap the keyboard icon at the bottom right of the pen scanner's screen, and follow the instruction to open

the web app (ScanNote) (URL : <https://wps.evolaclass.com>) on a desktop browser. Enter the pen scanner ID on the web app and click 【Connect】 to complete connection.

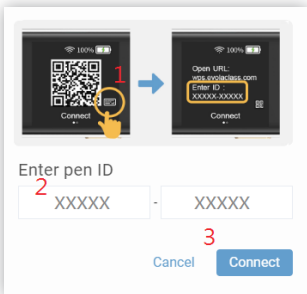


◎ How to Scan

1. Hold the WorldPenScan WiFi, align the alignment line on the pen tip with the middle of the letters, gently press down the pen tip to let the light bright up, then push or pull the pen scanner in the writing direction at a steady and constant speed, and lift the pen scanner at the end of the text to finish scanning.

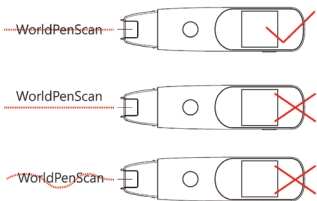


Note: It is recommended to keep the WorldPenScan WiFi at an angle of 60-80 degrees from the surface of the paper while scanning.

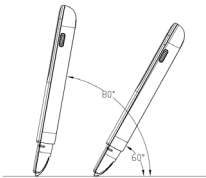


2. When scanning with WorldPenScan WiFi, look at the letter through the viewfinder on the pen scanner, and the letter will be scanned and extracted when it goes through the viewfinder.

Example:

If you want to scan a whole line of text, you can scan the line directly with the pen scanner.

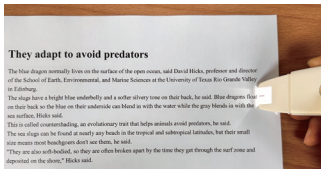

If you are scanning multiple paragraphs, stop when the scanned text enters the viewfinder, e.g., when scanning a single word "most", stop and lift the pen when you see the end of the word "t".

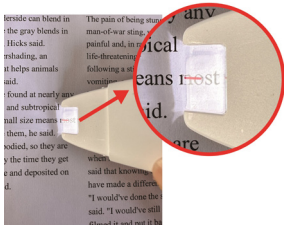

3. A tutorial video is available at the

URL below select 【How to scan】 to view.


<http://d.penpower.net/wpswifi>




◎ Function Description

WorldPenScan WiFi needs to be used with the exclusive web app (ScanNote) which provides Text capture, Instant translation, Dictionary lookup, and Immersive reader mode, etc. Users can operate the functions based on their needs.


· Text Capture


Click the  (Text capture) button for using the 【Text capture】 function and start scanning texts to extract the content.

After completion, you can use the 【Immersive reader mode】 function to help you reading, 【File manage】 , 【Export】 and 【Share】 the scanned data.


Note: If you need to directly scan text to MS Word and other application software, please click the  (download software) button to download and install an exclusive desktop software (Windows/ Mac). Once the installment and connection are completed as instructed, you could start scanning directly to MS Word.


· Immersive reader mode

Click the  (Immersive reader mode) button for using the 【Immersive reader mode】 function, which provides functions such as automatic read-aloud following, line focus, reading mode setting, and full-screen display to enhance your concentration and comprehension while reading.


Note: On a smartphone, please tap  (More) to navigate to 【Immersive reader mode】 function.


· File management

Click the  (Sign in) button to log in or register for an account, and then the data of each scan will be automatically saved to your own account.


Click the  (File management) button to view, add, edit, delete and rename the scanned data.


· Export

Click the  (Export) button and you can choose export the scanned data to a DocuINK application or save it as a MS Word (. docx) files.


Note: On a smartphone, please tap  (More) to navigate to 【Export】 function.

· Share


After logging into your account, click the  (Share) button and enable the file sharing feature. You can share the scanned text content through web links on social platforms such as Facebook, WhatsApp, etc.

Note: On a smartphone, please tap  (More) to navigate to **【Share】** function.

- **Instant translation**



Click the  (Instant translation) button, you can scan the entire sentence or a paragraph to get the translation.

- **Dictionary lookup**

Click the  (Dictionary lookup) button, you can scan the word to look up the definition of the word after selecting the dictionary you want to use.

Tip: When scanning the entire sentence, press the function button on the WorldPenScan WiFi to quickly switch to the next word.

- **Connection status of the WorldPenScan WiFi**

 which means the device is connected to the exclusive web app; otherwise,  which means it is not connected. Click this button to view information about the device (WorldPenScan WiFi ID, firmware version, battery), disconnect/connect, clear the connection history, and set the hotkey and pen holding mode.

3. Usage Notice

Ⓢ **Safety**

- This product is strictly prohibited from being exposed to direct sunlight or extreme environments

such as high temperature and heat.


- This product is not a toy. It is not suitable for children under 4 years old to use alone. Children should use this product with their parents.
- Do not soak this product and its accessories in liquid.
- Before using the charger, you must check whether the wires, plugs, shells and other parts are damaged. If damage is found, stop using it until the repair is complete.
- This product can only be used with the recommended power supply (recommended power supply specification: 5V-1A), and the power supply that compliance with certification specifications and meets the standard requirements should be used.
- Built-in 1200mAh lithium polymer battery cannot be removed or replaced. If damaged, please contact after-sales service and repair it.
- The charger is used by or under adult supervision.
- For the safety of you and your children, we have made charging protection and cannot be used while charging.

Cautions

1. Non-professionals are not allowed to replace the battery. If the battery is replaced incorrectly, there will be a safety hazard.

2. Only use the same type or equivalent type of battery to replace.
3. For your safety, please do not expose the battery in the product to overheating environments such as the sun or fire.

© Troubleshooting

Error	Solution
Boot failed	Charge the pen
Touch screen doesn't respond	Long press the power button for 10 seconds to force shutdown and boot again
Others	Contact customer service https://www.penpowerinc.com/en/customerServices/contactus 

For more detailed answers to frequently asked questions, please go to the following website and select the product you purchased to inquire:

<https://penpower.zendesk.com/>

